

1

INSTALLING YOUR TRACKER

 
The Auto-424 tracker gets its power from the car's OBD port. To get started, simply plug the tracker into the port. This is usually underneath the steering wheel or by the floorboard on the driver's side.



2

DOWNLOAD THE TRACKING APP

Download the mobile app from the App Store or Play Store by searching for 'logistimatics'.



3

LOGIN WITH EMAIL & PASSWORD

Login to the app with your email address and the password you used when you purchased your tracker



Tracker Placement



The tracker can be plugged directly into the OBD port or an OBD extension cable can be used. If the extension cable is used, it can be routed to a less conspicuous location.

Setting up alerts



To be notified if your tracker enters or exits an area, create a geofence. In the mobile app, click Geofences > New Geofence. Give your new geofence a name, address and size.

Troubleshooting



If you have a question or problem, we can help. Learn more about your tracker's features, watch tutorial videos and ask questions at logistimatics.com/contact

OBD Extension Cable



You can purchase an OBD extension cable at logistimatics.com/product/obd-cable

1 Tracking reporting frequency

By default, the tracker will report its location every 30 seconds. This provides a detailed view of all the locations the vehicle has travelled.

2 The Auto 424 is a 4G Tracker

Most trackers work on the 2G or 3G cellular network. The Auto-424 is a 4G tracker. This provides the most reliable tracking experience possible. The tracker uses both AT&T and Verizon towers networks and their partners.

3 Historic locations

The tracking app will show you where the tracker is right now and everywhere it has been. Tracking data is automatically saved and can be downloaded or exported as need from the tracking website gps.logistimatics.com

4 Add additional Users

You can add additional users via the tracking website gps.logistimatics.com

Go to Account > Settings > Add Users